





**Quick Reference Card** Series 6.0 Rev 2.0

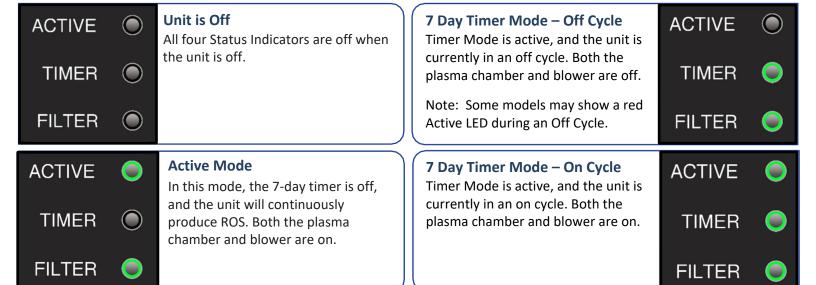

Filters Status - Ok

This indicator will illuminate green at first activation of the equipment. It

will remain green for 30 days. This is an indication that the filters are in

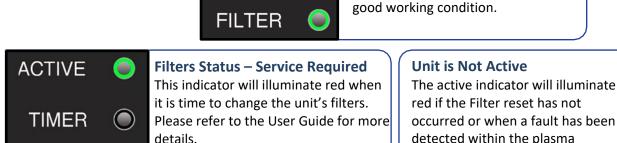


**ACTIVE** 

TIMER

Changing the unit filters every 30 days is critical. Once the filter status indicator illuminates red, you have 15 days before the unit shuts off. Please refer to the User Guide for more detail.

**FILTER** 

occurred or when a fault has been detected within the plasma chamber. Please refer to the User Guide for more details.

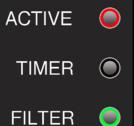

Press and hold the Filter LED for 15 seconds to reset. If the Active LED remains red, power the unit down for 2 hours. If the fault remains after powering the equipment on, service may be required.